



# Alkatronic


Create SD Card for Alkatronic


## Things you'll need:

1. A PC with Windows XP or newer or a MAC with Boot Camp or Parallel Desktop
2. Email us at [support@focustronic.net](mailto:support@focustronic.net) or PM us at [Focustronic Facebook Page](#). You will need a file from us to proceed.

## Instruction

1. Power off the Alkatronic before proceeding
2. [Link](#) to download the image file and update file
3. [Download](#) Win32DiskImager application
4. Install the Win32 DiskImager application
5. Insert a new SD Card into your computer (8GB or above Micro SD)
6. Browse the file with .img that you download from step 2
7. Select the SD card drive
8. Click “Write” to start writing the image
9. This will take about 10-20 min
10. Copy the “sn.txt” and “update.tar.gz.gpg” in the SD Card “root” directory
11. Remove the SD card and insert back into Alkatronic
12. Power up the unit and wait for 5 min to boot up
13. Connect to the unit as before and setup unit
  1. Setup Wifi
  2. Save settings
  3. Calibrate pumps
  4. Enable Dosetronic Mode (if you use Dosetronic)

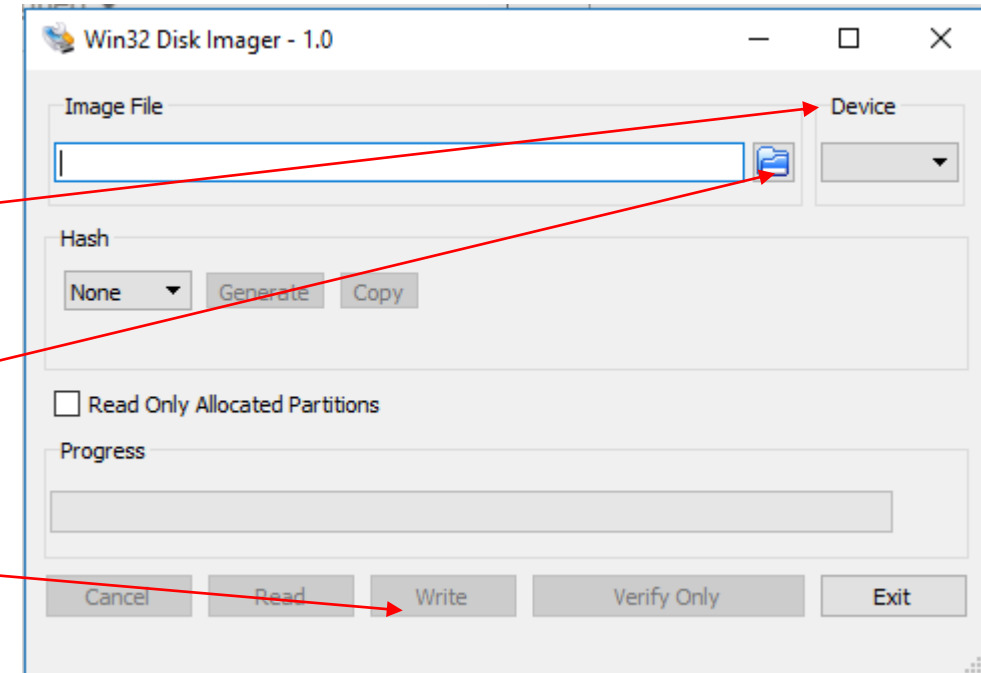

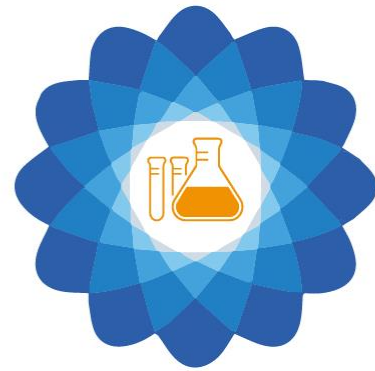

FOCUSTRONIC